



Emergency Backup Power Supply Replacement Instructions

For the GE Simon XT and XT2 systems

- 1) Call **1 800 653-9111** to have your system placed on test.
- 2) Confirm you received the correct backup power supply (battery) from ADT. (Picture 1)
- 3) Remove the screw located at the top of the panel. Once the screw is removed, press the left and right tabs down with fingers and pull forward (a small flathead screwdriver may be used if required) and swing chassis down. (Picture 2=XT and Picture 3=XT2)
- 4) Use fingers to separate the clips on top and bottom of battery. (Picture 4)
- 5) Remove old emergency backup power supply and replace with new emergency backup power supply. **Be sure to observe polarity.** (Picture 5)
- 6) Close chassis, re-install screw.
- 7) Test system after replacing battery.
- 8) Call the monitoring station, confirm signals, and remove test.




Take your old emergency backup power supply to the nearest recycling centre.



(Picture 1)



(Picture 2)

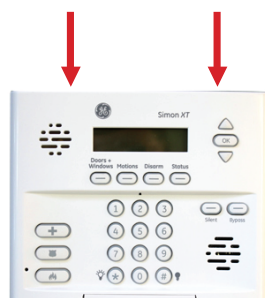

(Picture 3)



(Picture 4)



(Picture 5)