

# Emergency Backup Power Supply Replacement Instructions



For the following systems:

DSC 1550, 1555, 2550, 3000, 4010, 4020, 5010, 1832, 1864

Ademco Vista 15, 20, 40, 50 ; First Alert 142, 148, 162

Paradox

GE Concord



- 1) Call **1 800 653-9111** to have your system placed on test.
- 2) Confirm you received the correct backup power supply from ADT. (Picture 1)
- 3) Locate the main control panel, usually by the electrical panel. (Picture 2)
- 4) Open the cover of the control panel. (Picture 3)
- 5) Remove the leads from the old emergency backup power supply.
- 6) Remove old emergency backup power supply and replace with new emergency backup power supply.
- 7) Attach the "red" lead to the positive terminal (+ or red) of the emergency backup power supply, attach the "black" lead to the negative terminal (- or black) of the emergency backup power supply.
- 8) Close the cover of the control panel.
- 9) Take your old emergency backup power supply to the nearest recycling centre.
- 10) Test system after replacing battery.



12V 4A Backup Power Supply




12V 7A Backup Power Supply

(Picture 1)



Main Control Panel

(Picture 2)

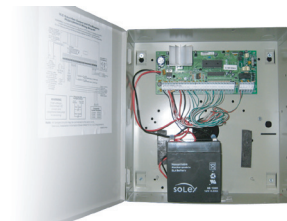

Backup Power Supply

(Picture 3)